

Welcome to Your New Laundry Facilities!

Universal Laundries has just installed the new card system and state of art washers and dryers with computerized time displays featuring 'super' cycles for better wash and dry results. We hope that you find the equipment enjoyable to use and please feel free to contact us at any time.

Operating Instructions

1. Adding Value to Cards

The new washers and dryers will have a smart card reader on each machine that deducts value from the card. To start a machine you must first add value to your card.

Insert your card face up into the Value Transfer Machine.



Then insert a \$5.00, \$10.00 or \$20.00 dollar bill and following instructions. Your new balance will appear on the Value Transfer machine display. Remove card.



2. Doing Laundry

Insert your smart chip card face up into the reader on either a washer or dryer. Be sure that you push the card in as far as it will go.

If you are using a Maytag washer, it will show you your card balance. To start the machine leave the card inserted, press and hold the cycle selection to match the kind of clothes you have in the machine. The washer will deduct the funds and then show your new remaining balance. Pull your card and go to the next machine.

For **Speed Queen** machines you will have to push the start button to have the cycle begin.

3. Buying a New Card

To purchase a card go the Value Transfer Machine and push the green button. The machine will ask you to insert a five-dollar bill. This is the cost of the card and you will still need to add funds to the card before using.

Starting Machines

1. Insert card face up into card reader on laundry machine and view your balance.



2. Leave card inserted while pressing and holding the cycle selection that you want.
3. View new balance and remove card.

Super Cycle Option

Longer wash and extra rinse.

1. After starting machine, insert card, press and hold cycle selection.

Extra Dry Time

1. After starting the dryer, insert your card and press and hold the cycle selection to add extra time for \$.25

Smart Card

Laundry Equipment Instructions



Universal

**For Service
Call**

800-272-4111